
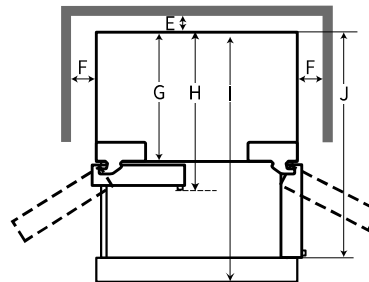
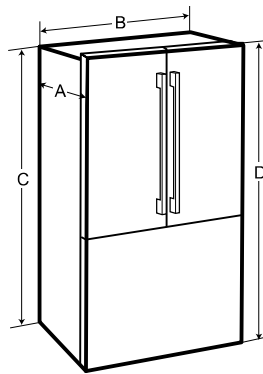


Dimensions and Clearances

- Check the dimensions of the appliance and the installation path to ensure there is sufficient room to move the refrigerator through doors or narrow openings.
- If an opening is too narrow to fit the refrigerator through, remove the refrigerator doors. See Removing/Assembling the Doors and Drawers in this manual.
- The installation location chosen for the refrigerator should allow space behind the unit for connections and airflow and space in front to open the doors and drawers.
- Too small of a distance from adjacent items may result in lowered freezing capability and increased electricity consumption charges. Allow at least 24 inches (610 mm) in front of the refrigerator to open the doors, and at least 2 inches (50.8 mm) between the back of the refrigerator and the wall.
- The space between the product and the side wall must be at least 5/32 in. (4 mm) on both sides. When installing in a narrow space, attach the enclosed spacers on each side ❶ of the refrigerator as shown to ensure a minimum clearance of 5/32 in. (4 mm).

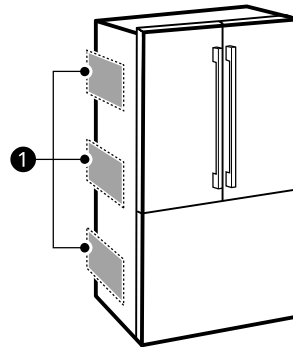

-	Dimension/Clearance	LF24Z6530* LF24Z6330*	LF25Z6211* LY24Z6231*
A	Depth without Handle	27 1/2" (699 mm)	27 1/2" (699 mm)
B	Width	35 3/4" (908 mm)	35 3/4" (908 mm)
C	Height to Top of Case	68 7/8" (1750 mm)	68 7/8" (1750 mm)
D	Height to Top of Hinge	70 1/4" (1785 mm)	70 1/4" (1785 mm)
E	Back Clearance	2" (50 mm)	2" (50 mm)
F	Side Clearance	5/32" (4 mm)	5/32" (4 mm)

14 INSTALLATION

-	Dimension/Clearance	LF24Z6530* LF24Z6330*	LF25Z6211* LY24Z6231*
G	Depth without Door	24 3/4" (628 mm)	24 3/4" (628 mm)
H	Depth with Handle	29 7/8" (759 mm)	N/A
I	Depth (Total with Freezer Drawer Open)	46" (1168 mm)	46" (1168 mm)
J	Depth (Total with Door Open 90°)	43 7/8" (1114 mm)	43 7/8" (1114 mm)