 
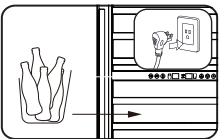 
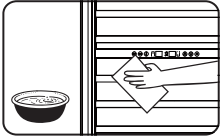 


3 mm
出血3 mm

Step 5: Maintenance

- 1.Unplug the freestanding wine cabinet and empty the machine.
- 2.Create a cleansing mixture by dissolving 3-4 tablespoons of baking soda in warm water.
- 3.Moisten a sponge or gentle cloth with the solution and employ it to clean the freestanding wine cabinet.
- 4.Rinse using fresh, warm water and then pat dry with a soft cloth.
- 5.It is imperative to maintain the cleanliness and suppleness of the gaskets to guarantee an effective seal. Adhere to the general guidelines to cleanse the door gaskets every three months. A light application of petroleum jelly on the hinge side of the gaskets will preserve their suppleness and ensure a secure seal.
- 6.Reconnect the freestanding wine cabinet once the unit is clean and dry.

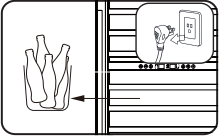

CAUTION:

- 1.It is recommended to clean the wine refrigerator at least once a quarter to maintain good performance and hygiene.
- 2.**DO NOT** use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents, metal scouring pads; some of these substances may erode, damage, and/or discolor your wine refrigerator.
- 3.**DO NOT** hard brushes, wire brushes, abrasives, organic solvents, boiling water, acid or alkaline items as this may damage the surface and interior of the wine refrigerator.

Customer Support

For assistance with any of the following, please contact our customer service team:

- 1.Operational issues such as unusual noise or cooling problems.
- 2.Damage or missing parts resulting from shipping.
- 3.Product size not meeting requirements.
- 4.Any other questions or concerns.

Support is available by phone at **1-833-632-0897** or by email at **support@homyd.com**.

FAQs

Q: What are the warranty specifications?
A: We provide a 12-month warranty and lifetime technical support for this item. If you would like to learn more, please contact our customer service team.

Q: Can the shelves inside the Wine Refrigerator be moved?
A: The shelves inside the Wine Refrigerator are adjustable and can be moved.

Q: Does it keep food securely cold?
A: This Wine Refrigerator is primarily designed for storing drinks, especially for chilling wine, beer, and other beverages. It features different temperature settings to keep drinks at their ideal temperatures.

For food items that need to be frozen, we recommend the safest practice is to use a freezer that is specifically designed for food storage.

Please refer to the user manual for more detailed information on usage, cleaning, and maintenance.

If issues persist after carefully reviewing the troubleshooting section, please contact customer service for assistance.

We're here to help!

- usage
- cleaning
- maintenance
- troubleshooting

support@homyd.com 1-833-632-0897

QUICK GUIDE

WC-04S Wine Refrigerator

SKU: FWC006-24BL-USZX

105 mm

315 mm

141 mm
正面

IMPORTANT SAFETY INSTRUCTIONS

- 

CHILD SAFETY HAZARD: An empty wine refrigerator is dangerous. Remove door/latches before disposal. **NEVER** let children operate, play with, or crawl inside the unit.
- 

FIRE/EXPLOSION RISK: Keep away from flammables (gasoline, aerosols, chemicals, etc.). **DO NOT** clean with flammable fluids or harsh chemicals. **DO NOT** use cabinet to store explosives.
- 

ELECTRICAL SAFETY: ONLY plug into a dedicated, properly grounded **115V** outlet (no extension cords/ungrounded adapters). **NEVER** pull on the cord to unplug - grip the plug. Keep the cord undamaged and secured.
- 

PROPER INSTALLATION: Place on a hard, level floor indoors (never outdoors). Ensure that there is a minimum clearance of **5 cm (2 inches)** around the machine and at least **5 cm (2 inches)** at the back to allow for proper ventilation. Avoid moisture, heat sources, and direct sunlight.
- 

SAFE USE: **DO NOT** place heavy objects or step on the unit. **DO NOT** use mechanical devices to defrost.





Step 1: Set Up

Unpack: Remove all external and internal packaging materials. Take off any tape or adhesive strips from the appliance before use.

Settle Refrigerant: Let the unit stand **upright for 24 hours** before plugging it in (to stabilize after transportation).


Position: Place on a level surface, away from heat, with **25 cm (10 inches)** clearance at the air outlet. The room temperature should be maintained between **10°C (50°F)** and **32°C (90°F)**.

Power Connection: Use a dedicated three-hole grounded outlet (**115V/60Hz**). **DO NOT** use extension cords.

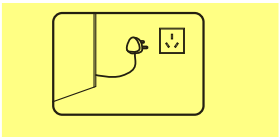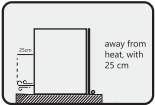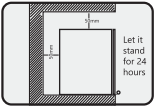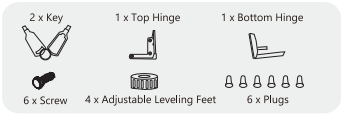


Step 2: Cleaning Before First Use

Wipe the interior surfaces, walls, and door seals with lukewarm water and a soft cloth. Dry thoroughly before powering on.

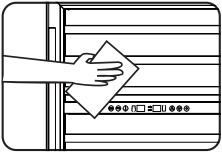


Step 3: Installing the Handle

1.As illustrated in Figure 1, remove the door gasket at the handle installation area until the two screws inside are visible. The gasket can be easily removed by hand without the need for tools.

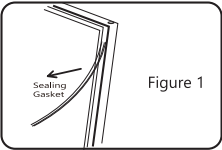

2.Align the handle with the pre-installed screws on the door frame. Tighten the screws with a screwdriver until the handle is securely fastened to the door frame, as depicted in Figure 2. (Avoid over-tightening to prevent damage to the handle assembly.)

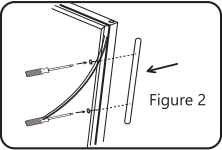


3.Reinstall the gasket to its original position.

Tip: The door of this unit can be reversed. Consult the user manual if required.

Step 4: Temperature Setup & Operation

1.After powering on, the machine will start automatically. Use the adjustable thermostat to set your desired temperature.

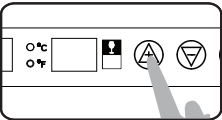


2.**Before fully loading the wines**, pre-cool the unit for **2 hours** at the desired temperature.

3.It may take some time for the unit to reach the desired low temperature.

Note: Temperature variations inside the unit are normal; areas near the door will be slightly warmer.

Energy Saving Tips: Place the wine refrigerator in the coolest part of the room. Open the door only when necessary. Frequent opening affects internal temperature.

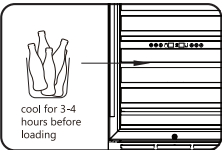

SKU: FWC006-24BL-USZX

