

BR002-126 BEVERAGE REFRIGERATOR


User Manual

SKU

BR002-126BL-USZX

Model Number

 BRU-03

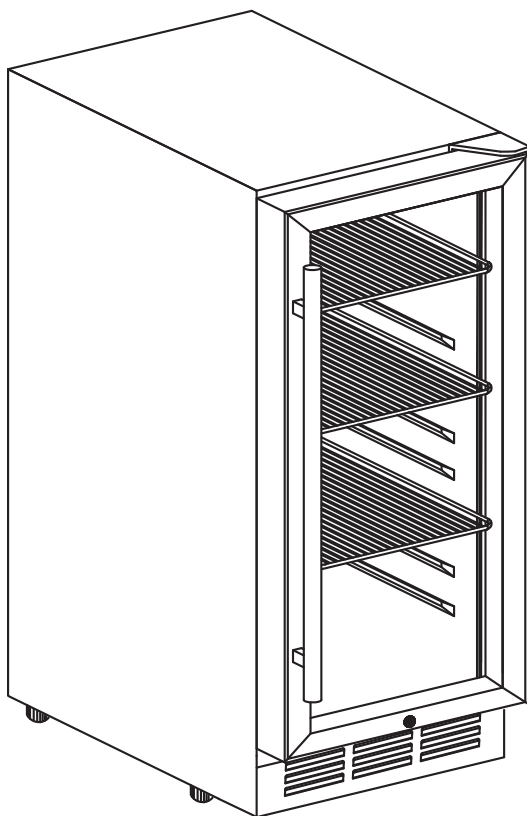

THANK YOU FOR CHOOSING US

Thank you for choosing our product.

We sincerely appreciate your trust and support. Your satisfaction is our top priority, and we are committed to delivering high-quality products and attentive service.

If you have any questions or suggestions during use, please do not hesitate to contact us. We are always here to assist you.

Contact Information

Email: support@homyd.com (Replies within 24 hours on business days)

Toll-Free: 1-833-632-0897 (Monday to Friday, 9:00 AM – 6:00 PM ET)

We hope this product brings ease and enjoyment to your daily life.

Warranty Statement

This product is covered by a limited warranty that protects against defects in materials and workmanship under normal household use.

If your product develops a fault after the return period of your purchase platform has ended, please contact us directly. We will do our best to assist you based on the warranty terms.

For warranty-related inquiries, please reach out using the contact details listed above.

Contents

Important Safety Instructions	01
Key Components and Structure	05
Control panel and display overview	07
Installation Guide	09
Maintenance	16
FAQs	18
Troubleshooting	20
Specifications	23
Warranty Policy	24

IMPORTANT SAFETY INSTRUCTIONS

 To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

1. Read all instructions before using the appliance.
2. **DANGER** or **WARNING**: An empty beverage refrigerator can be hazardous for children or small pets. If disposing of the beverage refrigerator, remove all gasket seals, latches, lids, or the entire door from your unused appliance, or take other actions to ensure the beverage refrigerator is harmless.
3. Never allow children to operate, play with, or crawl inside the appliance.
4. Never clean appliance parts with flammable fluids or harsh chemicals. The fumes can create a fire or explosion.
5. **DO NOT** store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire or explosion.

SAVE THESE INSTRUCTIONS

6. Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
7. **DO NOT** use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.
8. **DO NOT** store explosive substances in this appliance, such as aerosol cans with a flammable propellant.
9. **DO NOT** use extension cords or ungrounded (two-prong) adapters.
10. This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices, and other working environments; hotels, motels, and other residential-type environments; bed and breakfast environments; catering and similar non-retail applications.
11. **DO NOT** pull on the power cord when disconnecting the power plug of the beverage refrigerator. Firmly grasp the plug and pull it out from the socket directly.

INSTALLATION OF YOUR APPLIANCE

12.The appliance is designed for freestanding installation.

13.WARNING: **DO NOT** store or install the appliance outdoors.

14.CAUTION: This appliance is designed for storing and cooling beverages or wines. **DO NOT** store perishable food, medicine, or other medical products.

15.Place your appliance on a hard, level floor that is strong enough to support it when fully loaded.

16.To level your appliance, adjust the leveling legs at the bottom of the appliance, if necessary.

17.Allow at least **2 inches (50mm)** of space between the back and sides of the appliance, which allows the proper air circulation to cool the compressor and condenser. We **DO NOT** recommend installing the appliance on a rug or carpet.

18.**DO NOT** install the appliance near an oven or other heating source. Direct sunlight may affect the acrylic coating, and heat sources may increase electrical consumption. For best performance, **DO NOT** install the appliance behind a cabinet door or block the base grille. Extreme cold ambient temperatures may also prevent the appliance from performing properly.

19.Avoid locating the appliance in an area that may be exposed to excessive moisture. WARNING: We **DO NOT** recommend using beverage cabinets outdoors, as this accelerates aging and malfunctions. Avoid direct sunlight exposure if necessary when using outdoors.

20.**DO NOT** use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 115 volts and at least 15 amperes.

WARNINGS RELATED TO ELECTRICITY

Use a Properly Grounded Dedicated Outlet: This appliance requires a standard **115V/120V AC ~/60Hz** electrical outlet with a reliable three-prong grounding connection (rated **15A** or more). Have a qualified electrician check the wall outlet and circuit to ensure they are properly grounded.

Dedicated Circuit Required: Always plug the appliance into its own electrical outlet with a matching voltage rating (per the appliance label). **DO NOT** share the outlet with other electrical appliances. This ensures the best performance and prevents overloading house wiring circuits, which could create a fire hazard from overheating.

Handle the Power Cord & Plug Safely:

21.**DO NOT** damage the power cord under any circumstances. Be careful not to damage it when moving the appliance.

22.**DO NOT** plug or unplug power plugs with wet hands.

23.Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.

24.Immediately repair or replace all power cords that have become frayed, cracked, abraded, or otherwise damaged. **DO NOT** use a damaged cord.

25.To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.

26.Voltage Requirements: The beverage refrigerator uses an AC power supply of **115V/60Hz**. If the voltage fluctuation exceeds the range of **115V ±10%**, it can cause accidents or damage the beverage refrigerator.

27.Gas Leak Procedure: In case of leaking gas, turn off the leaking valve and open all doors and windows. **DO NOT** unplug the refrigerator yourself, as it may cause a fire. Contact customer support immediately.

28.No Items On Top: For your safety, **DO NOT** place any electric devices (like microwaves) on top of the beverage refrigerator.

29.Grounded Plug Warning: Improper use of the grounded plug may result in the risk of electrical shock.

WARNINGS RELATED TO USE

30. Make sure there is ample ventilation space surrounding the beverage refrigerator.

31. Be careful not to get your fingers or any dangling accessories caught in the beverage refrigerator door.

32. This beverage refrigerator and its packaging are not intended to be played with or used by children. If a child uses the refrigerator, it must be supervised by an adult to avoid injury.

33. Keep the beverage refrigerator away from moist, damp or humid environments and situations so as not to damage the electrical insulation.

34. **DO NOT** use the base, beverage refrigerator door, etc., as pedal or support.

35. **DO NOT** place heavy objects on top of the beverage refrigerator to prevent accidental damage or injury.

 
WARNINGS RELATED TO PLACING ITEMS

36. **DO NOT** put flammable, explosive, volatile, or highly corrosive items in the beverage refrigerator to prevent damage to the product or fire accidents.

37. **DO NOT** place flammable items near the beverage refrigerator to avoid fires. **DO NOT** cover or close ventilation and exhaust holes.

KEY COMPONENTS AND STRUCTURE

- ① Glass Door
- ② Hinge
- ③ Gasket
- ④ Control Panel
- ⑤ Shelf
- ⑥ Lock
- ⑦ Air Outlet
- ⑧ Leveling Legs (adjustable)
- ⑨ Drip Tray

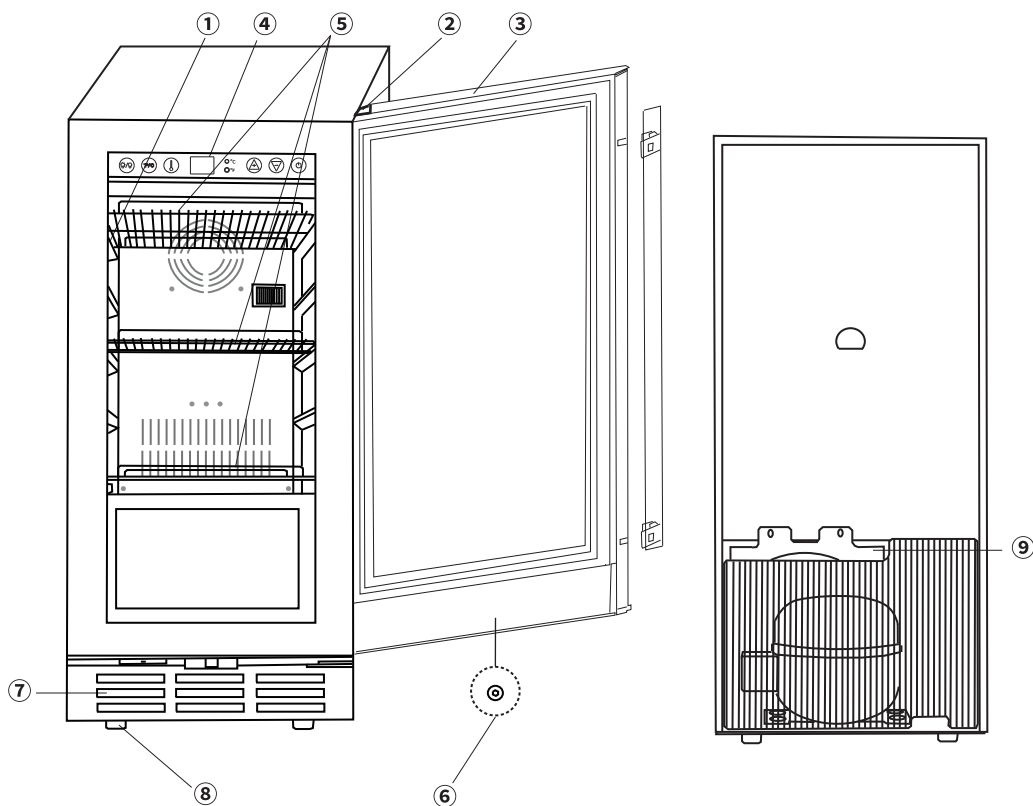

Accessories

2 x Keys

6 x Black Plastic Plugs (used to block the screw holes)

3 x Phillips Screws

2 x Extra Leveling Legs

1 x Upper Hinge

1 x Lower Hinge

 
1 x Stainless Steel Handle




3 x Phillips Screws



1 x Lower Hinge



1 x Upper Hinge

 

1 x Stainless Steel Handle



2 x Extra Leveling Legs

 


6 x Black Plastic Plugs



2 x Keys

CONTROL PANEL AND DISPLAY OVERVIEW

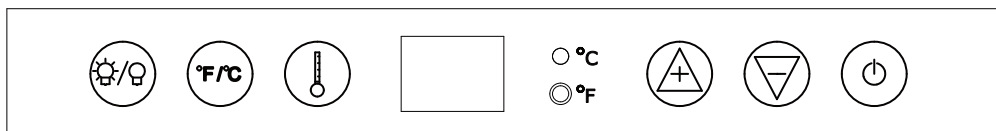

" " Button

Press once to turn on the machine when it is off.

Press and hold for 3 seconds to turn off the machine.

" " and " " Buttons

Use the  and  buttons to set the desired temperature between the range of 3°C-18°C (37°F-65°F).

" " Button

Press to begin adjusting the temperature.

" " Button

Press to toggle the temperature display between Celsius and Fahrenheit.

" " Button

Press once to turn the interior light **ON** or **OFF**.

Door Lock

This beverage refrigerator is equipped with a lock and key system.

The keys are included in the plastic bag with the Instruction Manual.

To **lock** the door: Insert the key into the lock and turn it **clockwise** until the metal pin is fully engaged.

To unlock the door: Turn the key counterclockwise and open the door.

After use, **remove the key and store it in a safe place.**

Light

When the light is off, it will automatically turn on when the door is opened, and it will turn off automatically when the door is closed.

Tips

When first loading the beverage refrigerator to full capacity, we recommend the following steps to effectively cool a large number of beverages.

1. Use the Adjustable Thermostat Control to set the temperature you want.
2. Allow the beverage refrigerator to cool for a minimum of two hours.
3. Load the beverages.
4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
5. Once the beverage refrigerator has cooled the beverages to the temperature you set, select a desired beverage refrigerator internal temperature using the Adjustable Thermostat Control.
6. Allow several hours for the beverage refrigerator to cool to the desired lower temperature.

Note: Temperature variations inside the unit are normal. Areas near the door may be slightly warmer than the interior..

INSTALLATION GUIDE

1. Setup the Beverage Refrigerator

A. Unpack and Inspect

Remove all exterior and interior packaging. Confirm all accessories are included: instruction manual, keys, black plastic plugs, Phillips screws, extra leveling legs, upper hinge, lower hinge, stainless steel handle, etc. If anything is missing, contact our customer service. (email support@homyd.com or call us at +1-833-632-0897).

B. Prepare the Beverage Refrigerator

Remove any tape securing the door, inner cabinet. Clean the inner cabinet and door with a damp cloth.

C. Position the Beverage Refrigerator

The beverage refrigerator should be placed in a dry, well-ventilated area with convenient access for daily use.

DO NOT install the appliance where the temperature will go below **10°C (50°F)** or **above 32°C (90°F)** because it will not maintain proper temperatures. Be sure to install your beverage refrigerator on a floor strong enough to support it when it is fully loaded. Ensure a clearance of at least 5 cm (2 inches) between the left/right sides and the wall.

D. Allow Refrigerant to Settle

If the unit was tipped during shipping or transportation, let it sit up right for 24 hours to allow the refrigerant to settle before plugging it in.

E. Plug Accessibility

Position the appliance so that the plug is easily accessible.

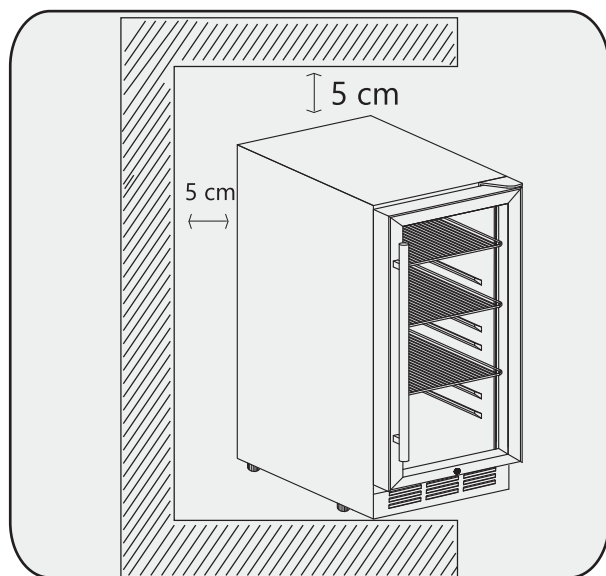 


Fig4.1

2.Install Stainless Steel Handle

A. As illustrated in Figure 4.2.1, extract the gasket from the handle installation area. The gasket can be easily removed manually without the need for tools.

B. Align the handle with the pre-installed screws on the door frame. Tighten the screws with a screwdriver until the handle is securely fastened to the door frame, as depicted in Figure 4.2.2. (Avoid over-tightening to prevent damage to the handle assembly).

C. Reinstall the gasket to its original position.

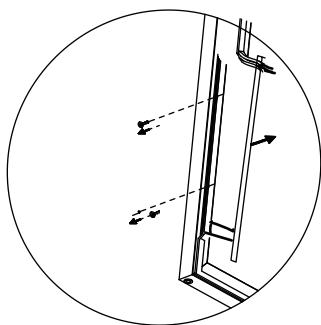 


Fig4.2.1


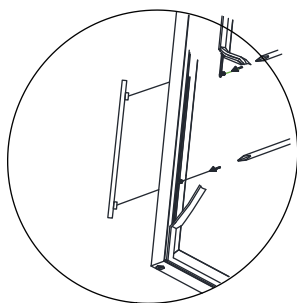 


Fig 4.2.2

3.Reverse the Door Swing

The beverage refrigerator is shipped with the door hinge brackets attached on the right side.

 The door may be reversed to allow opening from the left side.

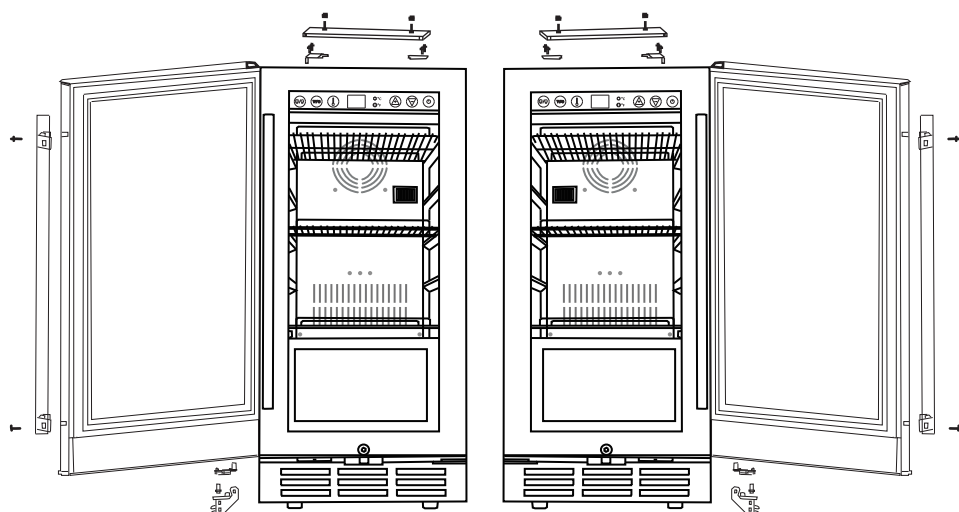

A.Unplug the Power Cord: Before starting door reversal, ensure the unit is unplugged.

B.Remove Plugs: Use a sharp implement to lever out the plugs (there are three on the door frame, both at the top and bottom, and another one on the door). If the plastic plugs were broken, disregard the broken plastic plugs. The holes to move the hinges are already pre-drilled.

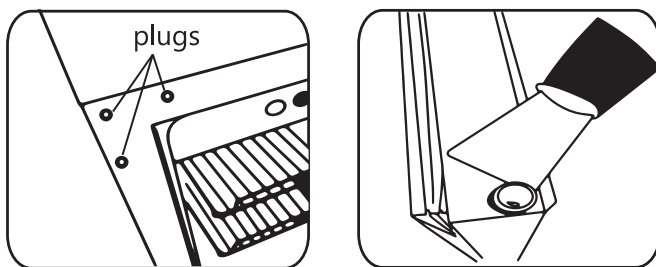 


Fig4.3.2

Note: The following instructions describe the reversal installation step-by-step as illustrated in items C-F(please see the picture illustrations to ensure correctness.)

C.Take Off the Door

Please commence disassembly solely from the bottom of the door following below steps:

- 1)Lay the beverage cabinet flat or tilted with the door facing upward to change its opening direction.
- 2)Use a hexagonal screwdriver to remove the two screws connecting the door, as shown in the figure 4.3.3(be cautious not to lose the metal anti-slip washers in between).

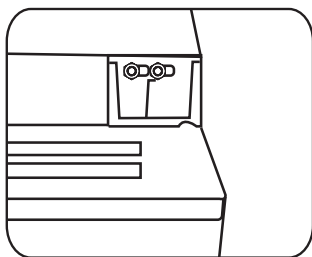 


Fig 4.3.3

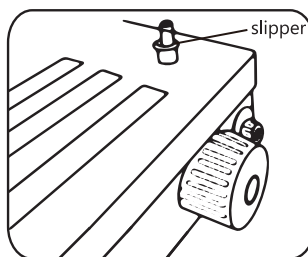 


Fig4.3.4

3) Lift slightly as depicted in the illustration to extract the connecting piece between the door and the hinges (i.e., lift from the hinge pin.)

Note: Ensure the preservation of the connecting piece under the door and hinges, for they will be required for subsequent steps.

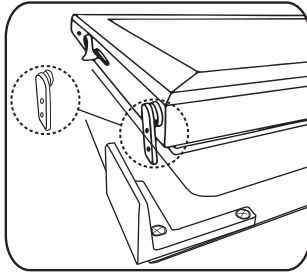 


Fig 4.3.5

4) Tilt the door (as shown in the figure 4.2.6) slightly to detach it.

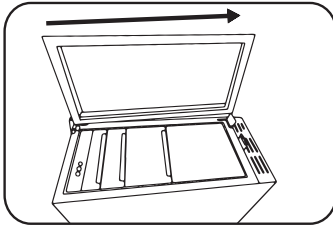 


Fig 4.3.6

D. Install the Door on the Opposite Side:

a. Use a Phillips screwdriver to disassemble the hinge brackets from the machine (save the removed screws for the next step).

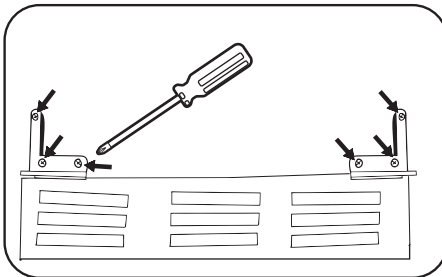 


Fig 4.3.7

b.Utilize the screws removed earlier to affix the left hinge brackets found in the accessories onto the door frame of the opposite side of the machine.

c.Transfer the saved the connecting piece(shown in the Fig4.2.5) to the underside of the door on the opposite side.

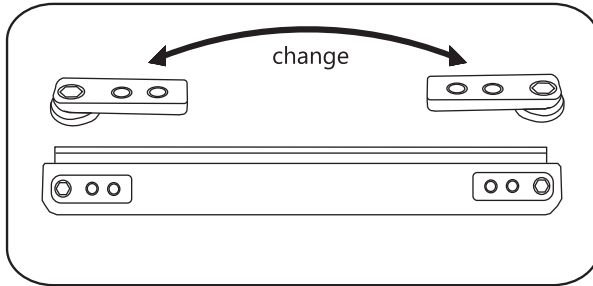 


Fig 4.3.8

d.Incline the door and insert it onto the hinge bracket above the machine.

e.Proceed to move the lower part of the door into the hinge bracket pin.

f.Secure the two hex screws for the lower hinge bracket, ensuring not to lose the intermediary metal anti-slip washers.

E.Insert the plugs removed in the second step into the holes on the side from which the door was removed.

F.Settle Down the Refrigerant: Wait at least **24 hours** before plugging in the refrigerator to allow the refrigerant to settle down. Then plug in the unit.

MAINTENANCE

Disconnecting the beverage refrigerator

Unplug the power plug from the socket to disconnect the beverage refrigerator.

Shelves

To remove the shelves from the track, pull each shelf out to the shelf post, as shown in figure 5.1. Lift it up again, then slowly pull the shelf out, as shown in figure 5.2.

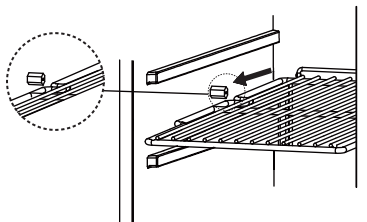 


fig 5.1

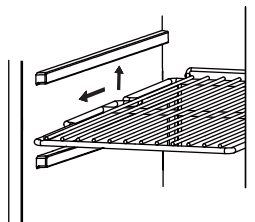 


fig5.2

Defrost the beverage refrigerator

1. Turn off the machine using the button and stop the compressor, unplug the power cord to melt the frost layer. (Never use mechanical devices or methods not recommended by the manufacturer to accelerate defrosting.)
2. Allow the frost to melt on its own, making sure that the internal drain is not blocked.
3. During this time, the melted frost will flow through the internal drain pipe into the water collection tray on top of the compressor. The heat of the compressor will evaporate the liquid (if the drip tray is overfilled, it will need to be cleaned manually)
4. Clean the interior with warm water and a soft cloth, wipe dry thoroughly, and reset the temperature and cool for 2 hours.
You can now put your beverages back into the beverage refrigerator.

Cleaning your beverage refrigerator

Dusting behind the beverage refrigerator and on the surrounding floor area will improve the cooling effect and save energy. The interior of the beverage refrigerator should be cleaned to avoid any odors. Follow the cleaning procedure below:

1. Unplug the beverage refrigerator and empty the contents from the beverage cabinet.
2. Create a cleansing mixture comprising 3-4 tablespoons of baking soda dissolved in warm water.
3. Moisten a sponge or gentle cloth with the solution and use it to clean your beverage refrigerator.
4. Rinse with fresh, warm water, then pat dry with a soft cloth.
5. Maintaining the cleanliness and suppleness of the gaskets is imperative to guarantee an effective seal. Adhere to the general guidelines to clean the door gaskets every three months. A light application of petroleum jelly on the hinge side of the gaskets will preserve their suppleness and ensure a secure seal.
6. Reconnect the beverage refrigerator when it is clean and dry.

Note: **DO NOT** use hard brushes, wire brushes, abrasives, organic solvents, boiling water, acid or alkaline items, as this may damage the surface and interior of the beverage refrigerator.

DO NOT use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents, or metal scouring pads. Some of these substances may erode, damage, and/or discolor your beverage refrigerator.

FAQs

1. Is this Beverage Refrigerator suitable for outdoor use?

This beverage refrigerator is primarily designed for indoor use and is best suited for environments like home kitchens or bars. We recommend keeping it indoors to ensure optimal performance and longevity. If you have any more questions or need further assistance, please don't hesitate to reach out. We're here to help!

2. Why can't the refrigerator maintain a stable temperature?

Due to external factors such as the compressor cycle switch, frequent door openings, high ambient temperatures, or overloading, slight temperature fluctuations are normal. Please ensure good airflow around stored items and avoid overloading to maintain optimal performance. Minor temperature changes help sustain cooling efficiency.

3. Is it possible to change the direction of the door?

The orientation of the Beverage Refrigerator door can be changed. Our manual contains detailed tutorials.

4. Why is the cooling performance of this refrigerator not effective?

Environmental factors, such as ambient temperature, can affect cooling efficiency. Please place the refrigerator in a well-ventilated area, away from direct sunlight, and ensure it's connected to a stable power source. If the cooling performance still significantly differs from expectations, there might be an issue with the unit. Please contact our customer service team for assistance. We're here to help and ensure everything works perfectly for you!

5. Can the shelves inside the refrigerator be moved?

The shelves inside the refrigerator are adjustable and can be moved.

6. How many beverages can the refrigerator hold?

The number of beverages you can store in the refrigerator depends on their size. Typically, it can accommodate a variety of bottles and cans, but the exact number will vary. If you have specific sizes in mind, please feel free to contact our customer service team. We're here to help! Thank you very much.

7. Does it keep food securely cold?

Our Beverage Refrigerator can be set to a temperature range of 37-65°F (3-18°C), ideal for storing various beverages. It offers different temperature settings to keep drinks at their optimal temperature. It can also store some foods that don't require specific temperature settings. However, for items that need freezing, a freezer specifically designed for food storage is necessary.

8. What are the warranty specifications?

We provide a 12-month warranty and lifetime technical support for this refrigerator. If you would like to learn more, please contact our customer service team. Thank you very much.

9.Does this refrigerator need to be installed?

This refrigerator requires no installation. Once you receive it, simply let it sit for 24 hours before plugging it in. This waiting period ensures optimal performance.Of course, you can also choose to add door handles and change the door direction yourself.

10.What is the return and exchange policy for this product?

Our return and exchange policy for this product is designed to ensure your happiness. If there are any quality issues or damage, we will take full responsibility and provide a return label for your convenience. However, if you wish to return the product due to reasons such as no longer needing it or an incorrect purchase, and there are no quality issues, the return shipping cost will need to be covered by you. For more detailed information or assistance, please don't hesitate to reach out to our customer service team. Thank you very much.

For further support, feel free to reach out to after-sales support team!


TROUBLESHOOTING

Problem	Possible causes	Solution
The beverage refrigerator does not run.	The beverage refrigerator may not be plugged in, or plug may be loose.	Ensure the beverage refrigerator has been plugged in properly.
	The beverage refrigerator is turned off.	Press  to turn on the beverage refrigerator.
	House fuse blown or tripped circuit breaker.	Check/replace fuse. Reset circuit breaker.
The beverage refrigerator is not cold enough.	External environment may require a higher setting.	Set a colder setting. Allow several hours for the temperature to stabilize.
	The beverage refrigerator has recently been disconnected for a period of time.	It takes 2 hours for the beverage refrigerator to cool down completely.
	Prolonged or frequent door openings.	Open the door less often.
	The door is not closed completely.	Close the door properly.
	The door gasket does not seal properly.	Check the door gasket. Clean or change gasket if necessary.
The compressor turns on and off frequently.	The room temperature is hotter than normal.	It's normal for the beverage refrigerator to work harder under these conditions.
	A large amount of contents has been added to the beverage refrigerator.	A large amount of contents cause the beverage refrigerator to run more until the desired temperature is reached.
	Prolonged or frequent door openings.	Open the door less often.
	The temperature has not been set correctly.	Press either  or  to check the set temperature, and set the temperature properly.
	The door is not closed completely.	Close the door properly.
	The door gasket does not seal properly.	Check the door gasket. Clean or change gasket if necessary.

Problem	Possible cause(s)	Solution
The light does not work.	Not plugged in.	Plug the beverage refrigerator in.
	The circuit breaker tripped or a blown fuse.	Check the breaker and/or fuses.
	The light button is "OFF".	Press  to turn the light ON .
Vibrations.	The beverage refrigerator is not leveled.	Check to assure that the beverage refrigerator is level.
	The bottles are vibrating.	Make sure the bottles don't touch each others
	There is an object under the beverage refrigerator.	Remove the object under the beverage refrigerator.
The beverage refrigerator seems to make too much noise.	The beverage refrigerator is not level	Level the beverage refrigerator.
	Normal noise from the flow of the refrigerant	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your beverage refrigerator. Contraction and expansion of the inside walls may cause popping and crackling noises.
The product was damaged upon receipt.	It may have been caused by bumps during transportation.	Please contact support@homyd.com.
The door will not close properly.	The beverage refrigerator is not level.	Level the beverage refrigerator.
	The door was reversed and not properly installed.	Re-install the door properly.
	The gasket is dirty.	Clean the door gasket.
	The shelves are out of position.	Place the shelves properly.

Problem	Possible cause(s)	Solution
Moisture build up on interior or exterior of the beverage refrigerator.	This is normal during high humidity periods.	Lower the room humidity.
	This is normal in high temperature environment.	Move the beverage refrigerator to a beverage refrigerator place, and avoid heat and sunlight.
	Prolonged or frequent door openings.	Open the door less often.
	The door does not seal completely.	Check door gaskets for proper seal.
Error Code: E1-E2-E3-E4-E7-E8	A sensor has failed.	Contact the customer service.

 SPECIFICATIONS

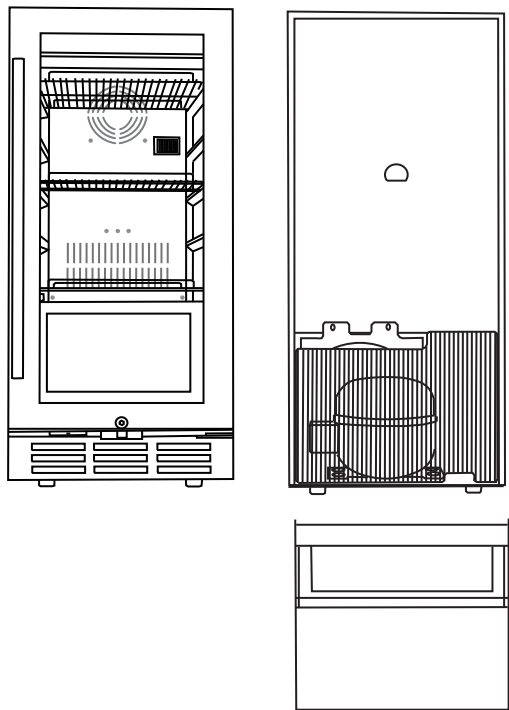

Specification	Value
SKU	BR002-126BL-USZX
MODEL	BRU-03
Refrigerant	R600a 1.52Oz/43g
Voltage/Frequency	115V/60HZ
Product Dimensions	15.1*24.5*33.6 inches
Net/Gross Weight	69.44/83.77 lbs

WARRANTY POLICY

1-Year Limited Warranty

Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM (ET)

Email: support@homyd.com

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear or damage due to mishandling, accidents, or failure to follow instructions are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. We aim to respond to emails within 24 business hours. If you don't receive a reply after sending us an email within this time frame, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

RETURN POLICY

We offer a 30-day return policy for purchases made directly through our company. This policy is separate from and does not override the return policies of third-party platforms.

Return Eligibility

Items must be returned within 30 days of purchase.

Products should be in new or like-new condition, with original packaging and all accessories (manuals, handles, keys, etc.).

Returns not related to quality issues will require the buyer to cover return shipping costs, which will be deducted from the final refund.

How to Initiate a Return

Contact our customer service team for return authorization.

Provide the following information:

Proof of purchase (e.g., screenshot with platform name, order number, date, item, and amount)

After approval, we will send a return shipping label. Attach it to the product box and return via the designated carrier.

Once we receive and inspect your return, we will process your refund within **2–3 business days** (excluding original processing or handling fees).

***Note:**

Returned products that are damaged or missing parts may not qualify for a refund.

This return policy does not affect your warranty rights.

For details, please refer to the “Return Policy” section of this manual or the return policy on your purchase platform.

SKU: BR002-126BL-USZX

