

nutrarchef™



Start Here



nutrarchefkitchen.com/register

NCBEERCL100
Compressor Refrigerator
USER GUIDE

About NutriChef

A mission born out of need

NutriChef was created on the principle that healthy home cooking should be attainable to all, regardless of skill level and economic status. Starting in 2014, we noticed the disconnect in our lives and in the lives of those around us. We were so busy, always rushing forward, and our health and personal lives suffered. We needed to find some way to slow down and put our health first, all without sacrificing convenience or taste. Could we somehow create healthier versions of our favorite foods, easily in our own kitchens? The answer was a resounding yes, and NutriChef was born.

We create products that make life a little easier and a little healthier

Our brand was created out of a desire to provide an alternative to fast food convenience and reintroduce people to home cooking. A healthy home-cooked meal is what brings families and friends together. We believe strongly in the value of simple pleasures. An evening spent cooking and sharing a meal of wholesome, nourishing foods is a memory in the making.

We believe a moment shared is priceless

Today, we have built upon our original mission and now in addition offer products that make the art of entertaining a simpler one. Entertaining and hosting family and friends are one of the great joys of life. Why waste a moment stuck in the kitchen? We offer products that free you up to socialize, while never sacrificing quality or taste.



TABLE OF CONTENTS

FEATURES AND TECHNICAL SPECS	4
IMPORTANT SAFETY INSTRUCTIONS	5
INSTALLATION INSTRUCTIONS	6
PARTS AND FEATURES	7
OPERATING YOUR UNIT	7
GENERAL FAULT DESCRIPTION	9
WIRING DIAGRAM	10
PROPER DISPOSAL OF THIS PRODUCT	10
REGISTER PRODUCT	11

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

California Prop 65 Warning



WARNING:

This product contains Styrene which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

Features:

- **Compact Beverage Cooler** for canned drinks with adjustable temperature control.
- **Digital Thermostat Display** allows easy monitoring and setting of temperatures.
- **Touch Button Controls** for simple and quick adjustments.
- **Temperature Units** can be switched between Celsius and Fahrenheit.
- **LED Interior Lighting** provides clear visibility without affecting cooling.
- **Adjustable Shelves** accommodate different beverage sizes.
- **Quiet Operation** with energy-efficient, low power consumption.
- **Reinforced Glass Door** maintains temperature with an air-tight seal.
- **Freestanding Design** fits on the floor, table, or countertop.
- **Right-Hinge Door** for easy access (non-reversible).

What's in the box:

- Compact Fridge
- (3) Beverage Racks

Technical Specs:

- Temperature Range: 41-64°F (5-18°C)
- Cooling System: Compressor Fan Cooling
- Total Capacity: 3.0 Cu. Ft. (643 Gal.)
- Can Capacity: Holds up to 108 standard 12 oz. (350 ml) cans
- Power Supply: 115V~60Hz
- Energy Consumption: 150 kWh/year
- Product Dimensions (L x W x H): 19.5" x 16.9" x 33.4" -inches

**BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES
AND OPERATING INSTRUCTIONS.**

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, or injury, read this manual before using the appliance.

1. This appliance is not for use by individuals with physical, sensory, or mental disabilities without supervision.
2. Supervise children to ensure the appliance is not misused.
3. Replace damaged power cords with manufacturer-approved replacements.
4. Ensure the supply cord is not trapped or damaged.
5. Keep ventilation openings clear of obstruction.
6. Do not use mechanical devices or methods to speed up defrosting unless recommended by the manufacturer.
7. Do not damage the refrigerant circuit.
8. Do not use electrical devices inside the food compartments unless specified by the manufacturer.
9. Use this appliance only in household environments (e.g., staff kitchen, bed and breakfast).
10. Limit door openings to prevent temperature increases and contamination of stored drinks.
11. When left empty for extended periods, defrost and clean the unit, leaving the door open to prevent mold.

WARNING: Risk of child entrapment. Before disposing of your old refrigerator, remove the doors and leave the shelves inside to prevent children from climbing in.

Note: This appliance contains flammable refrigerant R600a and foaming agent cyclopentane. Contact a professional for servicing or disposal and avoid fire risk during transport.

Save these instructions.

INSTALLATION INSTRUCTIONS

- This appliance is designed to be free-standing only and should not be recessed or built-in.
- Place the appliance on a floor that is strong enough to support it when fully loaded. To level your appliance, adjust the leveling legs at the bottom.
- Allow at least 4 inches of space between the top, back, and sides of the appliance to ensure proper air circulation for cooling the compressor and condenser.
- Keep the appliance away from direct sunlight and heat sources (such as stoves, heaters, and radiators). Direct sunlight may damage the acrylic coating, and heat sources can increase electrical consumption.


Warning:

Extreme cold ambient temperatures may cause the unit to malfunction.

- Avoid placing the appliance in moist areas.
- Plug the unit into an exclusive, properly installed, grounded wall outlet. Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions regarding power or grounding should be directed to a certified electrician or an authorized service center.
- After plugging the appliance into a wall outlet, allow it to cool down for 2-3 hours before placing any items inside.

PARTS AND FEATURES

1. Upper Hinge
2. Shelves
3. Door Handle
4. Door Gasket
5. Display Shelf
6. Adjustable Foot
7. Bottom Hinge

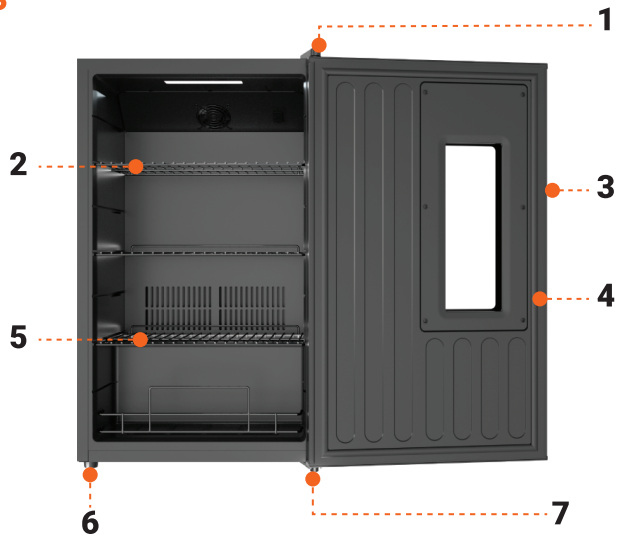

OPERATING YOUR UNIT

Setting the Temperature Control



Key Function

1. **Unlock key:** Press and hold for 2 seconds to unlock.
2. **Light/°C/°F key:** Short press to turn on or off the light;
Press and hold to switch between Fahrenheit and Celsius.
3. **Add key:** Temperature setting.
4. **Minus key:** Temperature setting.

Automatic Locking Function

When no key operation is performed for 20 seconds, the keys will be locked automatically. After locking, the plus and minus keys cannot be operated. The unlock key and light/°C/°F key operate normally.

Auto Light Off Function

When no key operation is performed for 10 minutes, the lamp will turn off automatically.

Adjustable Range

Minimum value: 21°F / -6°C (Initial value: 46°F / 8°C)

Maximum value: 64°F / 18°C

Display Range

Temperature display range of control panel: 21°F to 64°F / -6°C to 18°C

Display Stability

In the Fahrenheit state:

When the temperature measured by the temperature probe is within $\pm 2^\circ\text{F}$ of the set temperature, the temperature display will show the set temperature value.

In the Celsius state:

When the temperature measured by the temperature probe is within $\pm 1^\circ\text{C}$ of the set temperature, the temperature display will show the set temperature value.

Error Code

LL: When the temperature measured by the temperature probe is lower than 14°F / -10°C, "LL" is displayed, flashing, and the cooling is stopped.

When the temperature probe is short-circuited or disconnected, the set temperature value is displayed. The compressor will work for 15 minutes and stop for 18 minutes.

When the temperature measured by the temperature probe is higher than 99°F / 37°C, the set temperature value is displayed. The compressor will work for 15 minutes and stop for 18 minutes.

Memory Function

When the control board is re-energized after each power-off, the temperature setting value and Fahrenheit/Celsius state will be the same as before the power-off, regardless of the length of the power-off time.

GENERAL FAULT DESCRIPTION

If the product is not working properly, please check and address the issues using the following methods. If the situation cannot be resolved, please contact the local after-sales service center promptly, and be sure to provide the model name and product number in detail.

The Refrigerator Doesn't Work

- Check if the power is **ON**.
- Ensure the power supply voltage is adequate.


It's Noisy

- Verify that the refrigerator is placed on a flat, stable surface.
- Make sure the refrigerator is not touching any external objects or walls.

The Internal Temperature Is Not Low

- Adjust the temperature to a cooler setting.
- Ensure the door is closed tightly, not opened too frequently, and not left open for too long.
- Check if the refrigerator is exposed to direct sunlight or placed too close to a heat source, like a stove or furnace.
- Ensure there is enough space around the refrigerator for proper air circulation and heat dissipation.

WIRING DIAGRAM

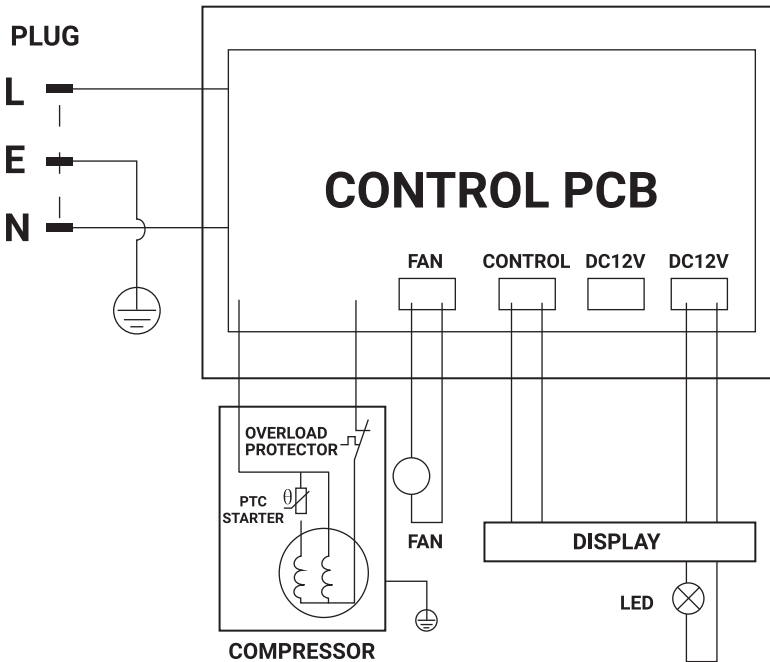

Proper Disposal of This Product



This symbol on the product or packaging indicates that it should not be disposed of as regular household waste. Instead, take it to a designated collection point for recycling electrical and electronic equipment. Proper disposal helps prevent environmental damage and health risks.

For more information on recycling this product, contact your local authorities, waste disposal service, or the store where you purchased it.



During use, servicing, and disposal of the appliance, pay attention to the fire warning symbol on the rear of the appliance (usually on the rear panel or compressor). This symbol, which is usually yellow or orange, indicates that flammable materials are present in the refrigerant pipes and compressor. Keep the appliance away from fire sources during use, servicing, and disposal.



Register Product

Thank you for choosing Nutrichef. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your Nutrichef purchase in perfect condition.

Start Here



Model Number:
NCBEERCL100

[nutrichefkitchen.com/
pages/register](https://nutrichefkitchen.com/pages/register)

nutrichef™



Questions or Comments?

We are here to help!

Phone: 1.718.535.1800

nutrichefkitchen.com/ContactUs