



SWLINE-C CONTROL PANEL AND FERMATOR 40/10 DOOR CONNECTION DIAGRAM

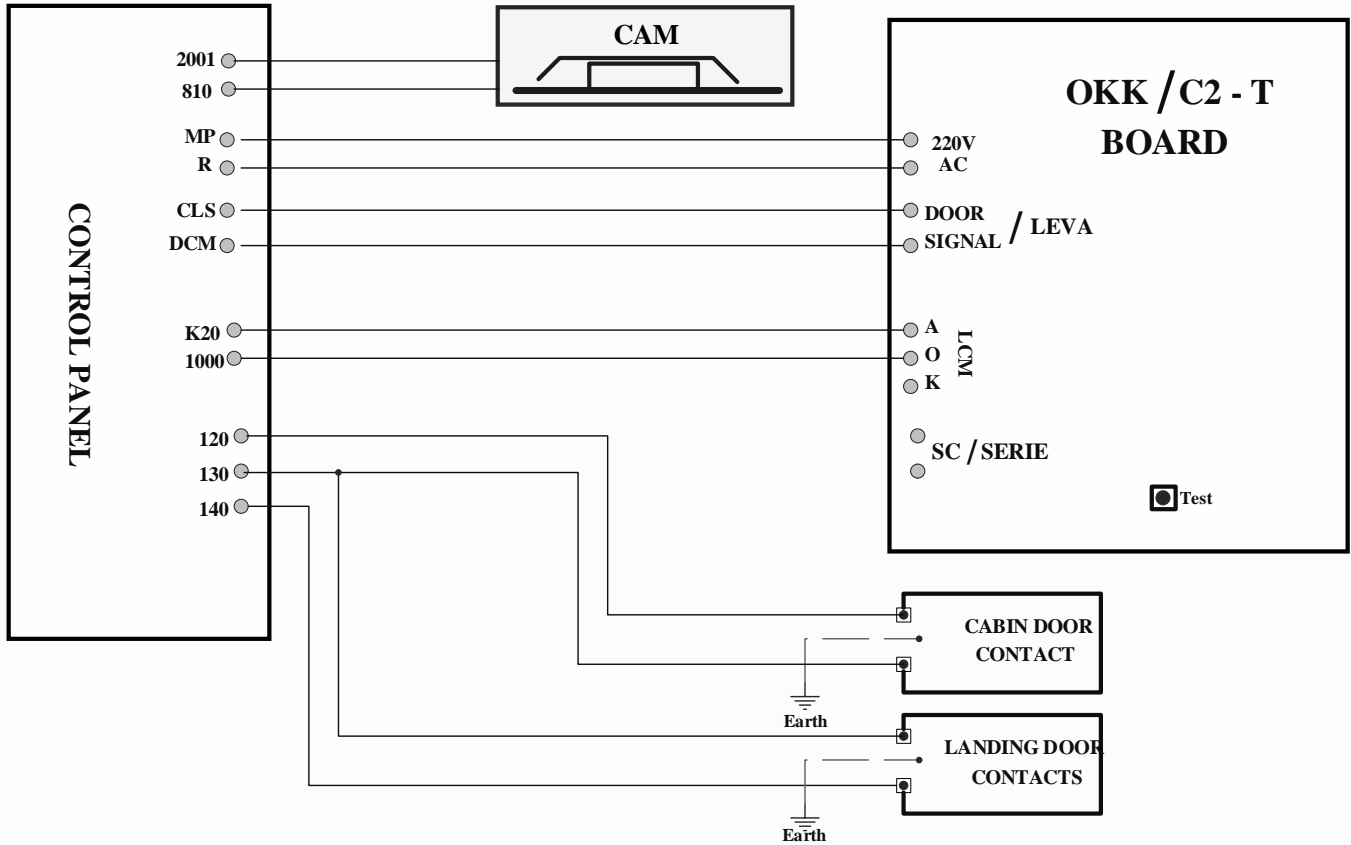

SWLINE-C CONTROL PANEL AND VVVF BOARD CONNECTION DIAGRAM

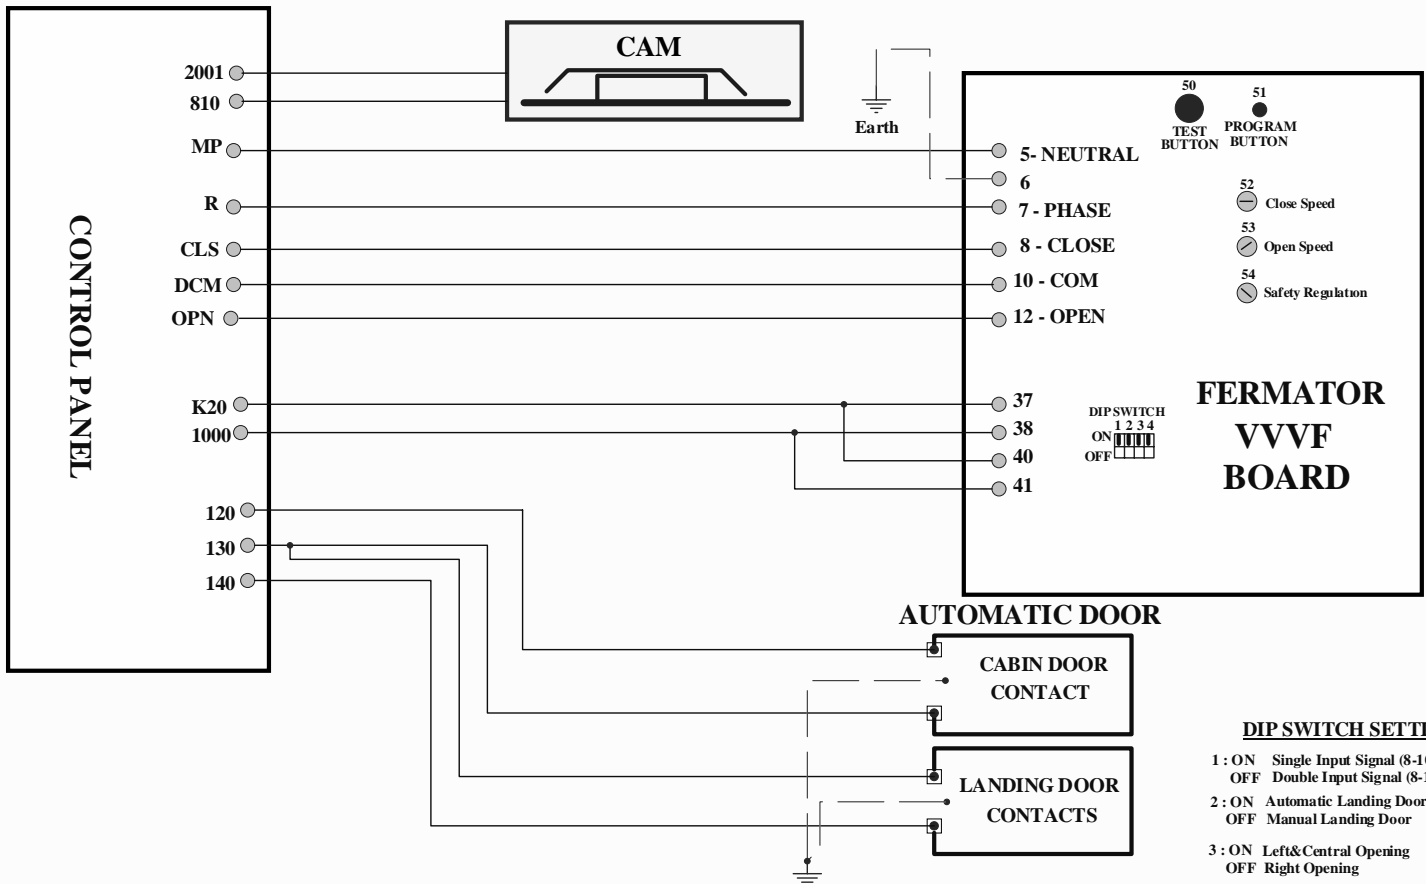

DIP SWITCH SETTINGS

- 1 : ON Single Input Signal (8-10)
OFF Double Input Signal (8-10-12)
- 2 : ON Automatic Landing Door
OFF Manual Landing Door
- 3 : ON Left&Central Opening
OFF Right Opening
- 4 : ON Automatic self control (MASTER)
OFF Manual Control (SLAVE)

- 1) CAM terminals (2001-810) are not used if car and landing doors are full-automatic
- 2) If cabin door is automatic and landing doors are manual then:
 Landing door contacts are serially connected to 120-130 terminals.
 Landing door lock contacts are serially connected to Car door contact (130-140) terminals.

F7.5.5.02.08

This document is a sample for applications. All information contained in these materials are subject to change by Aybey Elektronik without notice. Aybey Elektronik assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.

SWLINE-C CONTROL PANEL AND FERMATOR DOOR CONNECTION DIAGRAM				
AYBEY ELEKTRONİK	SERIES SWC007	DRW. APPRV.	M. AKKUŞ M. AYBEY	REV. 02 DATE 26 MAY 05